

Rear Lamp Removal & Bulb Replacement

The following is the procedure to remove the rear brake lamp assembly (left and right). The same procedure can be used to replace rear bulbs.

- Open the boot.
- The boot trim/lining does not need to be removed.
- To change the rear bulbs, the lamp assembly needs to be removed.
- In the following image there are two plastic caps (highlighted in red). Remove the plastic caps using a small screwdriver.



- Behind the plastic caps are the two bolts used to secure the rear lamp assembly to the car.
- Undo the two bolts to remove the lamp assembly.
- Pull the lamp assembly slightly to remove.
- Be careful of the wiring behind the lamp.



- Unscrew the bulb holder for the bulb which requires replacing.



Installation is the reverse of the above procedure.

Disclaimer: This document has been provided for references only.
The Altezza Club of Australia cannot be held responsible for any damages caused by performing these procedures.